


Kumo[®]

instruction manual

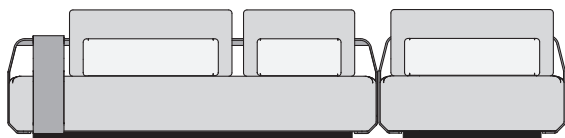

Manutti[®]

Kumo[®]

Kumo is a light and playful contemporary seating island with pouf. Japanese for cloud, Kumo invites you to create your personalised outdoor cocoon. It comes in different shapes and sizes. The movable armrests and back supports are easily adjusted to create either a comfortable sofa or stylish lounger, a luxurious lounge chair or a relaxing footrest.

Here is how to start your outdoor moments of peace and connection under the sun.

Parts

Kumo bases



Kumo base 216 (triple seat)



Kumo base 109 (single seat)

Kumo cushions



Kumo seat cushion 216



Kumo seat cushion 109

Kumo backrests + armrests

IMPORTANT: To remove before assembly: cardboard packaging, plastic foil, Bolt M8, removable fixation, wooden slat,... Make sure that you have enough room to enable you to assemble as efficiently as possible. Open the cardboard packaging and use this as protection while you assemble the pieces. First, fit the lowest backrest 109 or 216 (55.5 cm), with 2 assembly holes per side.



Backrest 216 - content of the box:

4 x bolt M8

4 x knurled nut M8




How to notice difference:



Backrest 109 - content of the box:

4 x bolt M8


4 x knurled nut M8

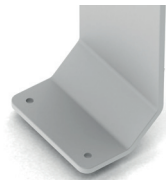

Armrest 109 - content of the box:

4 x bolt M8

4 x knurled nut M8

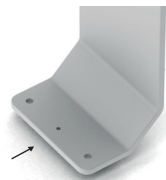

1 extra centrehole

How to fixate the back and armrest to the base


Slide backrest 109 or 216 (55.5 cm) under the top plate of the Kumo base and position it in the desired stand. Be careful not to cause any damage. Have 2-4 persons help you assemble the pieces.



Slide the supplied polystyrene under both sides in the middle of backrest 109 or 216 (55.5 cm). This will lift backrest 109 or 216 (55.5 cm) to just underneath the top plate.



Put supplied bolt M8 through the 2 square holes in the top plate, from the top downwards to the bottom, and put these through the round holes in backrest 109 or 216 (55.5 cm). Now screw the knurled nut slightly. Repeat this on the other side.

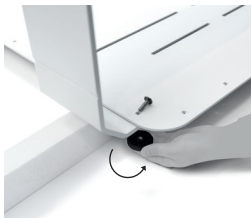


Be sure to confirm that the head of the bolt fits perfectly flush with the plate. Now tighten the knurled nut at the bottom by screwing it tightly. Then remove the polystyrene.




Possible Back- and armrest positions

Slide backrest 109 or 216 (55,5 cm) under the top plate of the Kumo base and position it in the desired stand. Be careful not to cause any damage. Have 2-4 persons help you assemble the pieces.

Please determine first the position of the backrest 109 or 216 (55,5 cm) before placing the armrest 109 (57 cm).

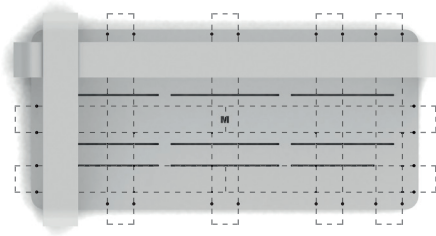


Large: 23 different combinations
Infinite possibilities as a concept

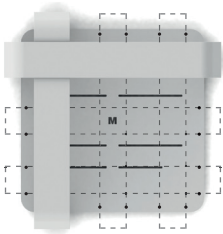


Small: 15 different combinations
Infinite possibilities as a concept

Assembly steps for seat cushion


After you have fitted the backrest, slide the seat cushion carefully between backrest 109 or 216 (55.5 cm).

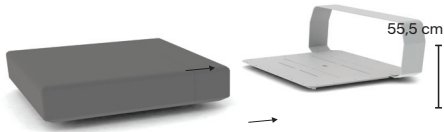

Now affix armrest 109 (57 cm) in identically the same way as the backrest, so that its final position is above the backrest.

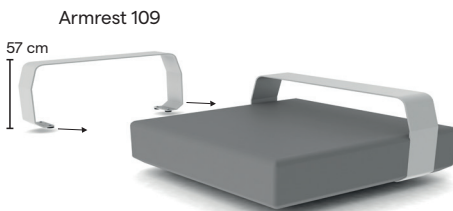

Be sure to dismantle armrest 109 (57 cm) first if you wish to remove seat cushion 109 or 216.

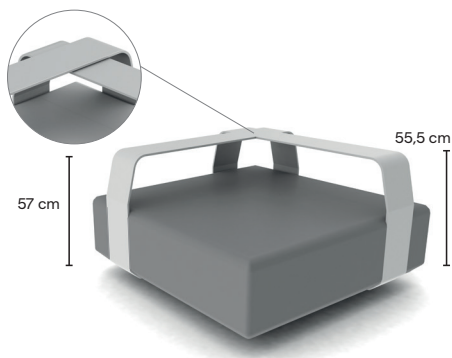


Rubber strips

On the bottom part of all Kumo seat cushions there is a rubber strip to prevent direct contact with the Kumo base. To avoid scratches on the surface of your Kumo base, make sure to fold the zipper to the inside of the cover below the rubber flap. Always make sure that the water does not stay too long underneath the seat cushion to ensure that the seat cushion stays in position (anti-slip function).




Bottom View

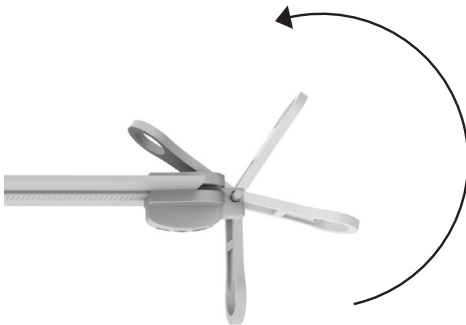


Position of back cushion against backrest


Slide the back cushions in the correct position under backrest 109 or 216 (55.5 cm). Click until they are fixed. The edge must always be placed under the backrest and never above it to prevent the backrest and back cushion from being damaged.

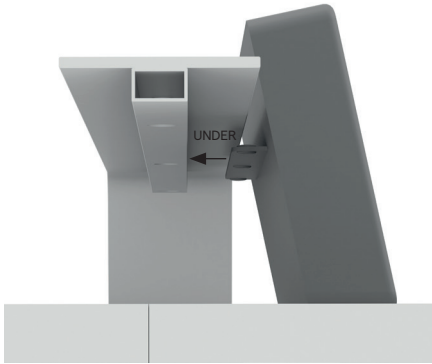

SECTION VIEW

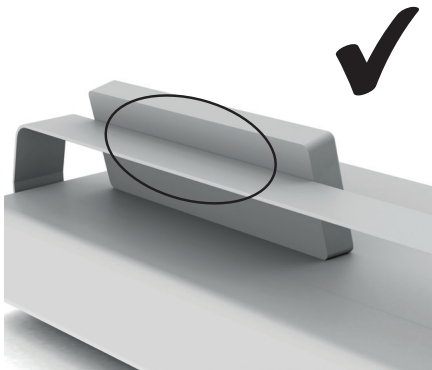

NO VISIBLE BACK CUSHION SUPPORT

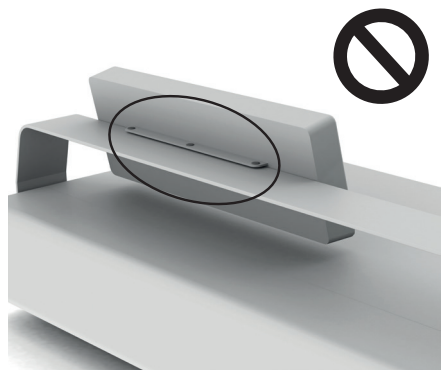

NO VISIBLE BACK CUSHION SUPPORT

Adjustable feet


Adjustable feet on the bottom of each module ensure each module is level and fits perfectly to the next module. Please note that all four or five adjustable feet should touch the floor in order to be perfectly level.

Important: for the Kumo module 216, do not forget to adjust the middle foot!



Lowering the modules

If you want to lower your Kumo modules for aesthetic reasons, you can remove the extra washer that is placed on every adjustable foot (4 or 5 feet, depending on the module). Please note that if this is done, the Manutti outdoor side tables (open 32 and closed 36) can not be placed under the Kumo modules.

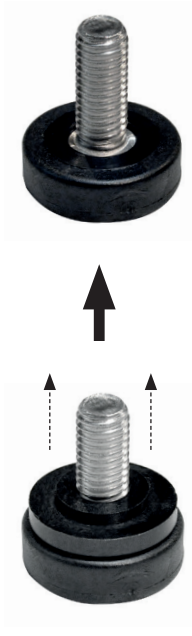


Safety



WARNING:

Do not use a high pressure cleaner to clean your furniture base. This may damage your furniture.

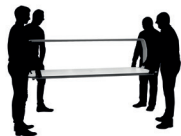

IMPORTANT:

We recommend that if you want to move the module, you do so carefully. Base 216: min. 4 people and base 109: min. 2 people.

Maintenance

Go to manutti.com/maintenance

Need more assistance?

Contact the Manutti customer service anytime and get all your questions answered at support@manutti.com